


## Product Specification Sheet

### 1½" Bath Combined Waste & Overflow with Parking Plug facility

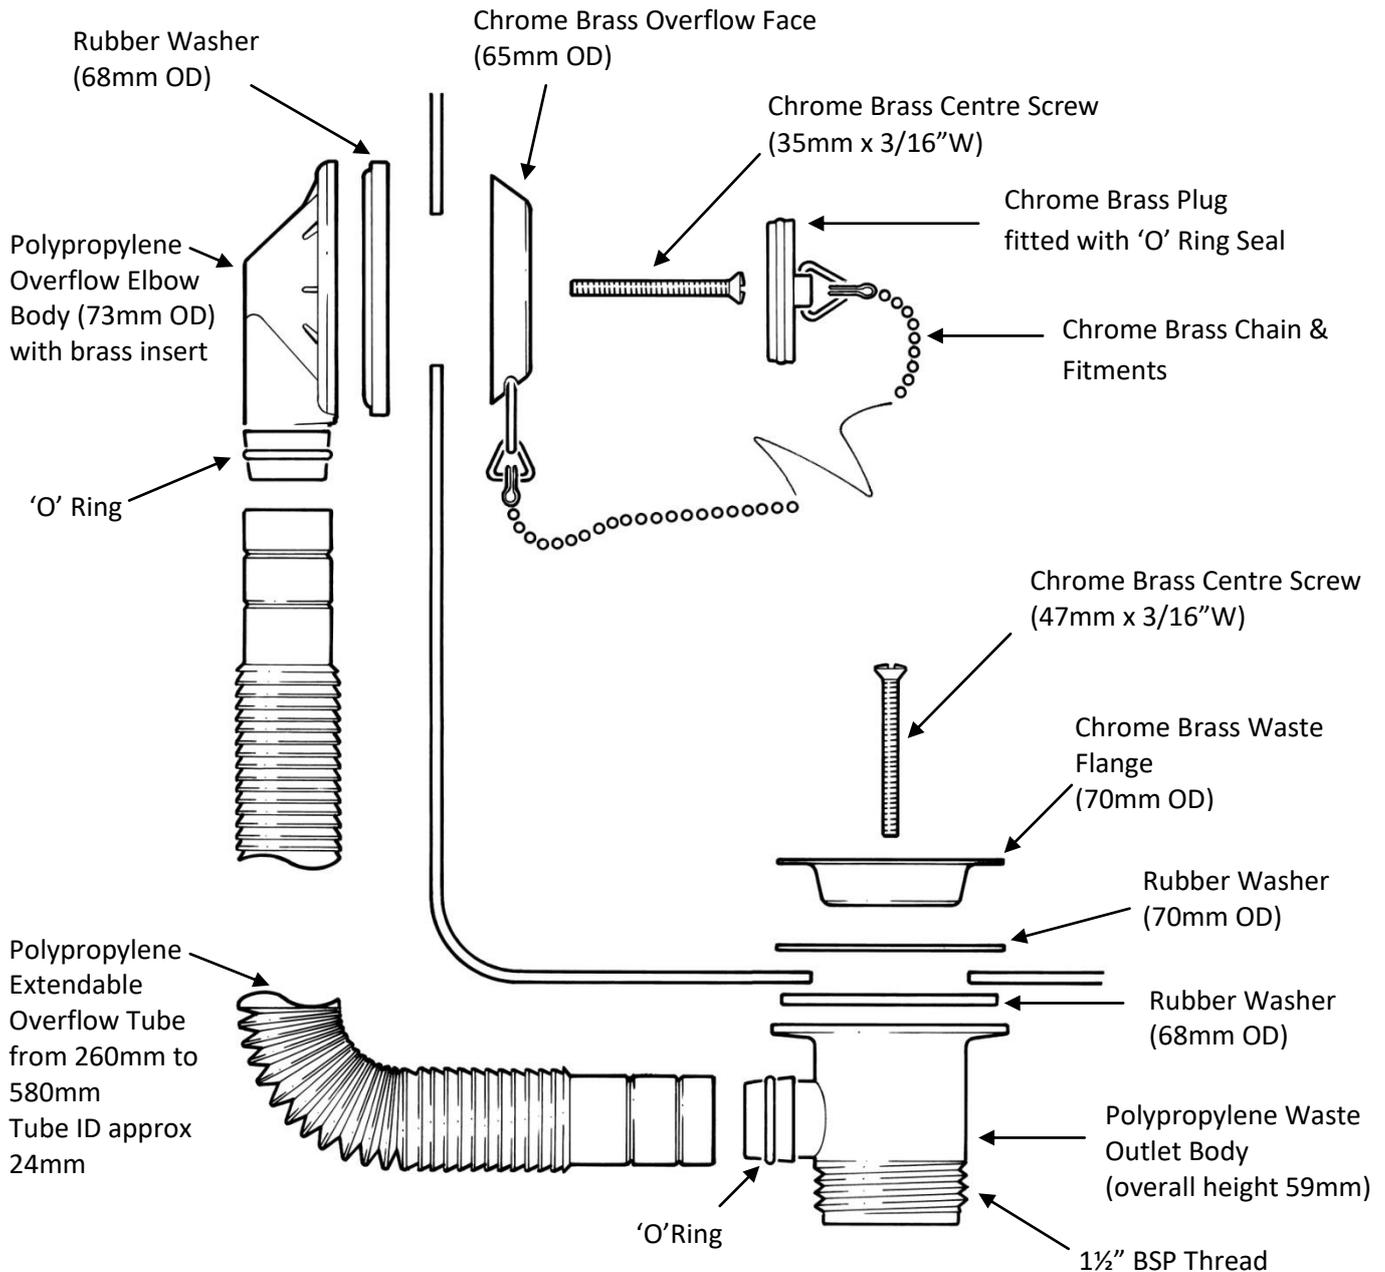

- 1) Assemble components as shown on the drawing.
- 2) A light application of silicon sealant is recommended between the waste flange and bath.
- 3) Care should be taken not to over tighten the centre screw.
- 4) Once fitting has been completed carefully clean all plated surfaces. The finished surfaces on this product are hard and durable and should be cleaned on a regular basis to maintain their appearance. They should only be cleaned with warm soapy water and then wiped with a dry cloth. Under no circumstances should any aggressive or abrasive cleaning agent be used, as this can lead to a deterioration of the high quality finish.