


## Product Specification Sheet

### 1½" Bath Combined Waste & Overflow with standard or mushroom Spring Plug

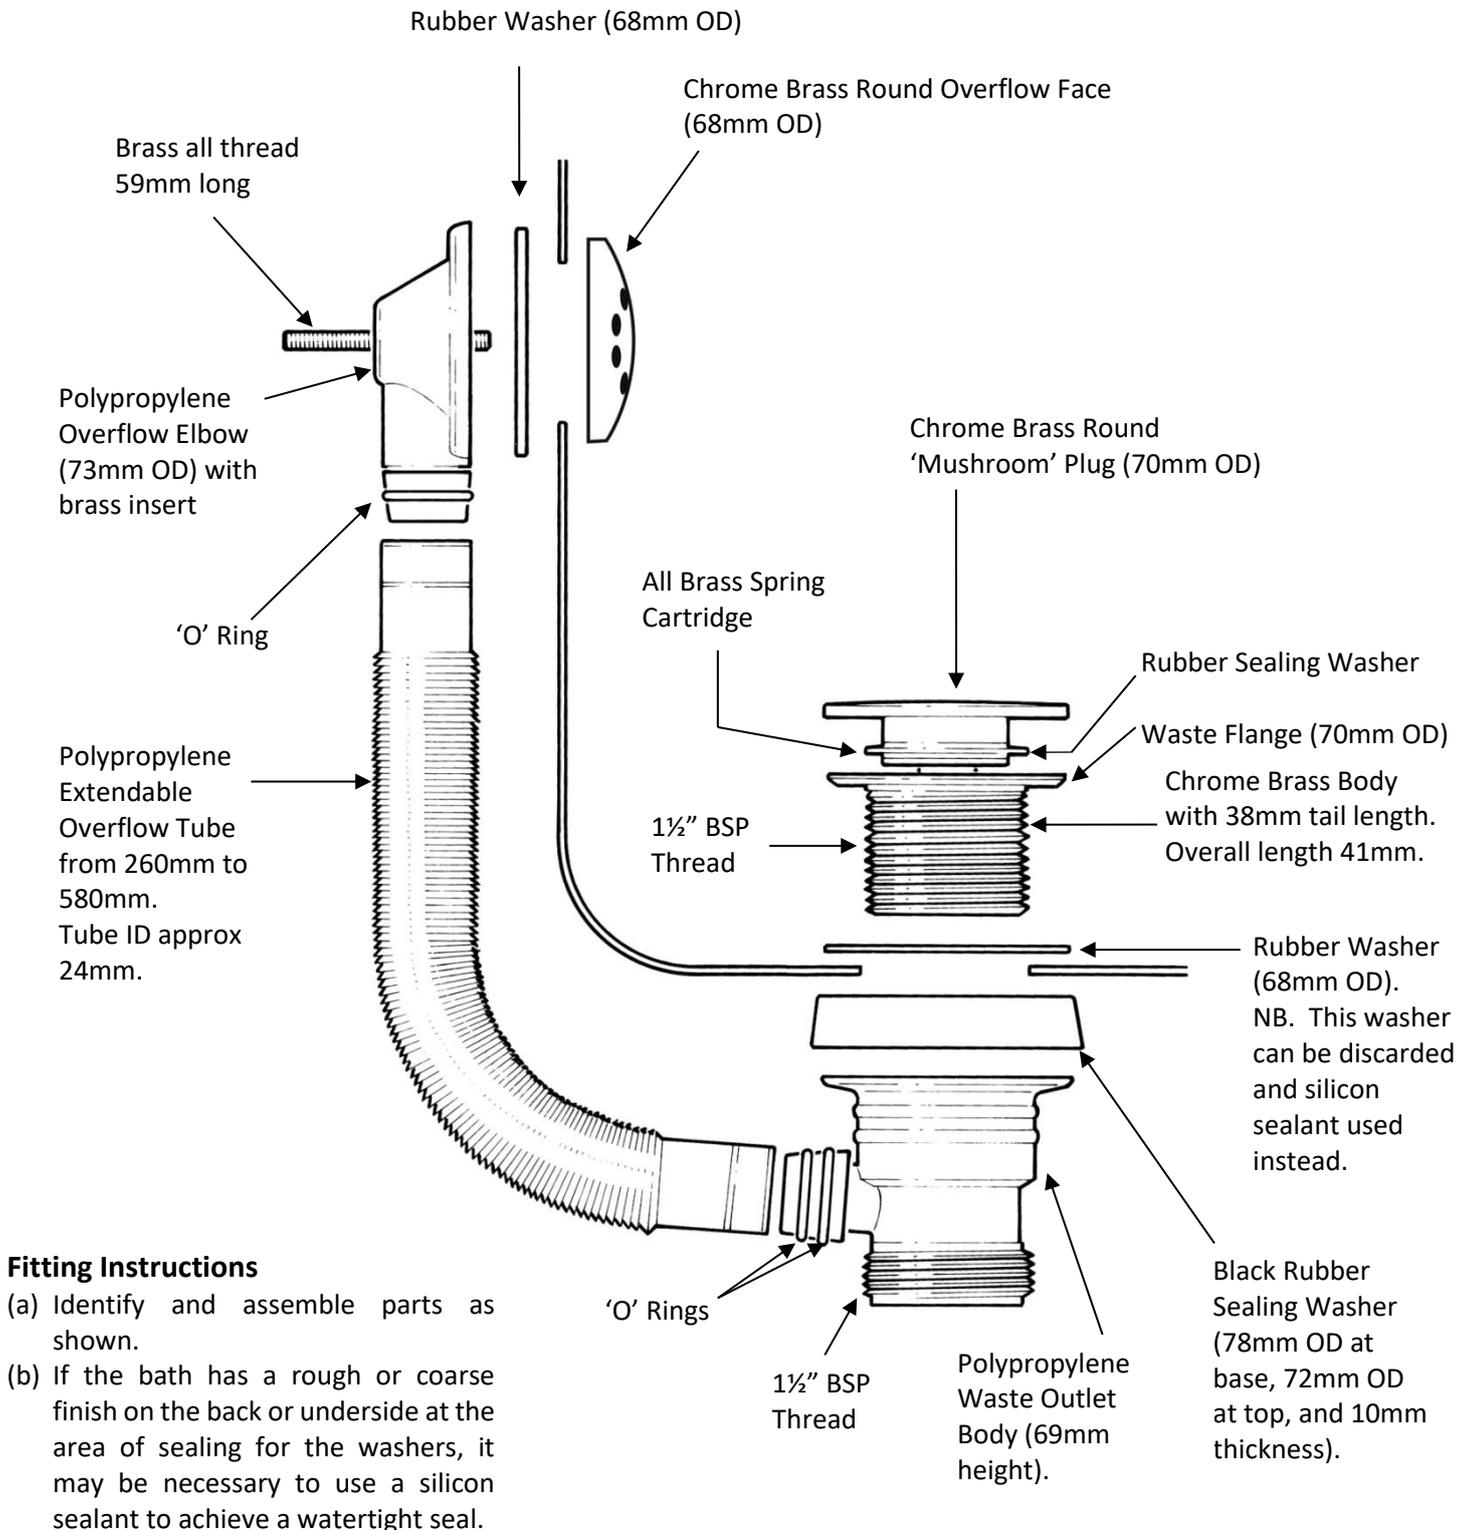

#### Fitting Instructions

- (a) Identify and assemble parts as shown.
- (b) If the bath has a rough or coarse finish on the back or underside at the area of sealing for the washers, it may be necessary to use a silicon sealant to achieve a watertight seal.
- (c) A watertight seal must be made on the inside of the bath, that is between the underside of the waste flange and the bath. This can be achieved by using the washer or alternatively this can be discarded and a seal made by using silicon sealant.
- (d) On completion of installation fill the bath with water and carefully check there are no leaks.
- (e) Once fitting has been completed carefully clean all plated surfaces. The finished surfaces on this product are hard and durable and should be cleaned on a regular basis to maintain their appearance. They should only be cleaned with warm soapy water and then wiped with a dry cloth. Under no circumstances should any aggressive or abrasive cleaning agent be used, as this can lead to a deterioration of the high quality finish.